




# THE SOUTHWEST CLUSTER

Network expansion project.

## Dial on demand Talk Groups

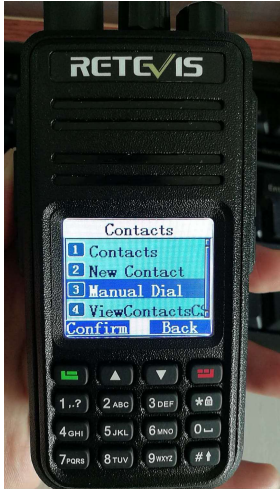

### TO CONNECT TO A DIAL ON DEMAND TALK GROUP

1. Make sure your radio is tuned to Timeslot 1 talk Group 9.
2. Go to the menu system and select 'CONTACTS'.
3. Select the menu option for 'MANUAL DIAL' Then 'PRIVATE CALL'
4. Enter the Talk Group number you wish to call and then press 'TRANSMIT' (PTT) for about a second to ensure the radio transmitted.  
Most radios will make an audible sound, or you will see the TX LED light, then release the PTT.
5. If successful your radio will announce "Connected to xxxx" where xxxx is the talk group you dialled.

1 **Contacts > Manual dial > Private call > xxxx**

### TO DIAL A TALKGROUP



2 **PTT**

3 **Linked to xxxx**

UK Wide Talk Groups

FreeDMR TG	FreeDMR Names	Phoenix TG	Phoenix Name
2350	UK Central	235	UK Call -QSY
2351	Chat 1	80	UK WIDE 1
2352	Chat 2	81	UK WIDE 2
2353	Chat 3	82	UK WIDE 3
2354	Chat 4	83	UK WIDE 4
2355	Chat 5	84	UK WIDE 5
2356	Chat 6		

### DISCONNECT A TALK GROUP




1 **Contacts > Manual dial > Private call > 4000**

2 **PTT**

3 **Not linked**

[www.freeDMR.uk](http://www.freeDMR.uk) for a compressive list of talkgroups

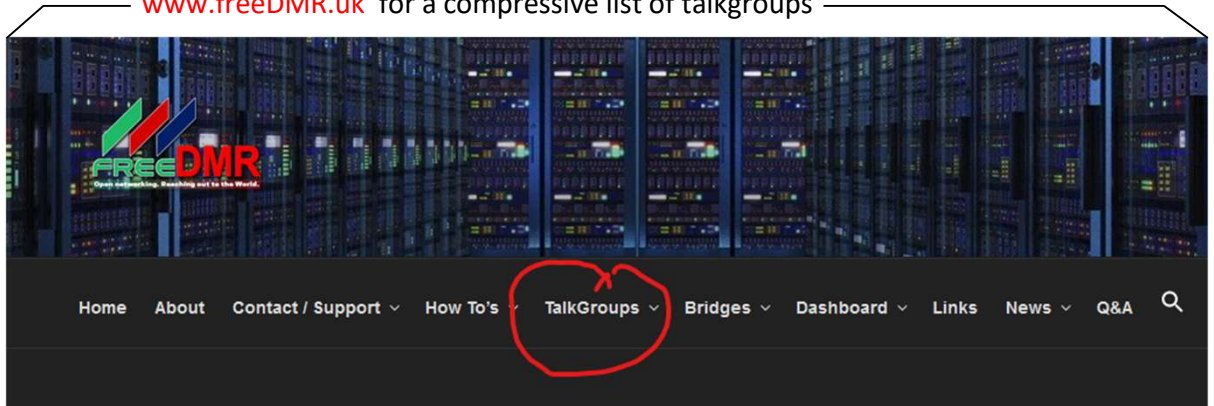

### WHAT TALKGROUP IS CONNECTED?

1 **Contacts > Manual dial > Private call > 5000**

2 **PTT**

3 **Linked to xxxx**

It is always good operator practice to disconnect from the Dialed Talk Group when you complete your QSO.

